




FyreWerks - 45-60 Minute 3 Ply
Routed Wood Insert/Veneer Construction
Step 1

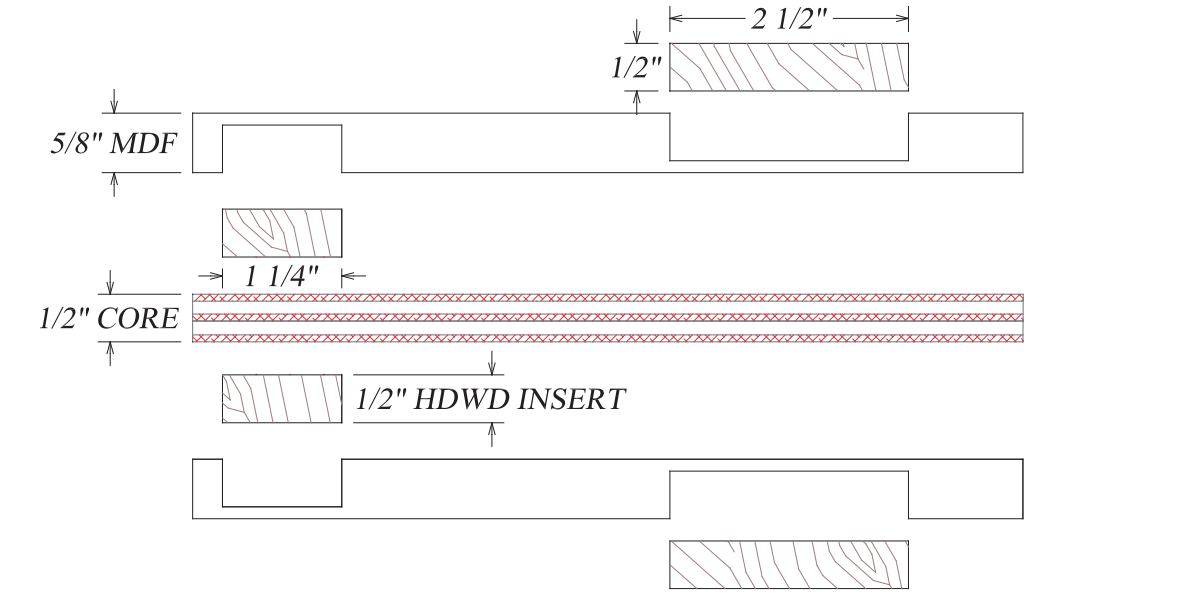

FyreWerks - 45-60 Minute 3 Ply
Routed Wood Insert/Veneer Construction
Step 2

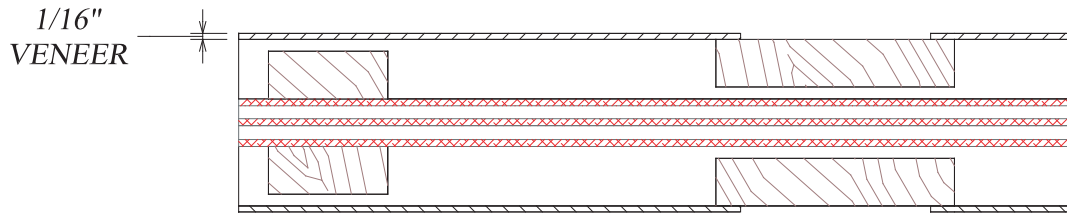

FyreWerks - 45-60 Minute 3 Ply
Routed Wood Insert/Veneer Construction
Step 3

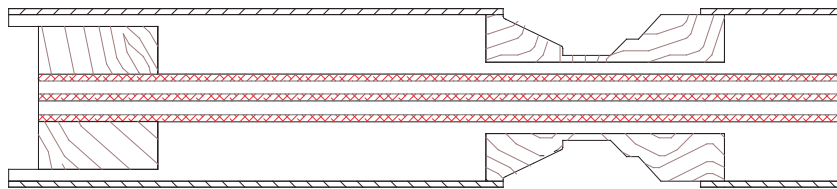

FyreWerks - 45-60 Minute 3 Ply
Routed Wood Insert/Veneer Construction
Step 4

